


Auto - Tamp

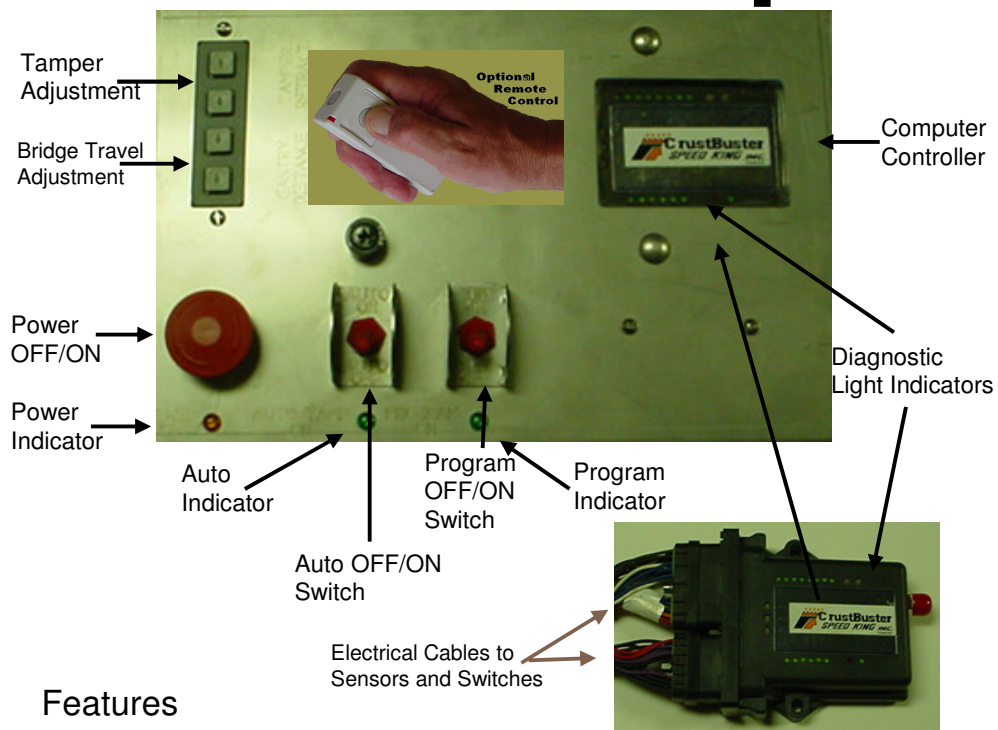

Features

- **The operator's Console is mounted in front of the hydraulic levers, controlling bridge and tamper travel, for easy access.**
- **Fully adjustable bridge distance travel and tamper retract distance.** Utilizing the key pad on the console, the operator can set the bridge travel distance and the tamper height clearance to maximize operating speed and module compaction.
- **Fully programmable.** Operator can choose the factory programmed setting or develop a program matched to specific needs and conditions.
- **Minimum sensors.** The system operates with three sensors, two proximity switches, and one transducer.
- **Integrated Control Valve.** All electronic actuation is integrated into the hydraulic valve body.
- **Diagnostic Panel.** Should problems be experienced, visual diagnostics may be done from the control panel lights to quickly and accurately determine the problem.